

## How to install Xtribe - Instrument Overlay

Thank you for purchasing the Instrument Overlay. Now the operation of the Korg Electribe 2 becomes much more intuitive. The high-quality overlay can be well installed due its properties (because of the mildy adhesive backing, you can also remove it), which has proven itself several times in practice.  
But: For a perfect result (installing/removing), we can not take over any guarantee .

If you feel capable to stick it on, which is quite possible with a „steady hand“, please read this manual completely before you start.

### Needed things

- cloth for cleaning (included)
- fixing strips to fix the overlay temporarily (included)
- bright and preferably „dust-free“ environment
- clean and relative fat-free hands

### 1. Remove knob caps

First, remove the 18 caps from the knobs. For this, the caps are simply pulled off vertically upwards. If the knobs are a bit tighter, a flat and wide screwdriver can be used as a support (be careful).



### 2. Clean the device

Now the entire upper surface of the Electribe 2 should be cleaned. Remove any dust, dirt or greasy spots with the cloth (included).

### 3. Position and fix the overlay (temporary)

The best thing to do is turn the unit over so the back connectors point towards you. Place the overlay on the Electribe and put it in the best position (all punched holes relatively centered). Now you fix the overlay at the bottom with as many of the supplied fixing strips. Make sure that the fixing strips adhere relatively evenly to the overlay and the device. The strips must be fastened with pressure so that they adhere firmly to the device and the overlay.




Now check if the overlay is still in exact position. If not, repeat step 3.

**Attention:** In this step **do not remove** the backside protective foil of the overlay (which protects the adhesive side)!

### 4. Remove the rear protective film

Start at the upper left corner (removal aid) to remove the backside protective foil carefully. Since this happens gradually, it is necessary to hold the overlay a few times and thus touch the adhesive side. This is not a problem as long as the fingers are relatively clean. Now, the overlay is overturned once by 180 degrees and the rest of the protective film is slowly pulled off to the side to the right.

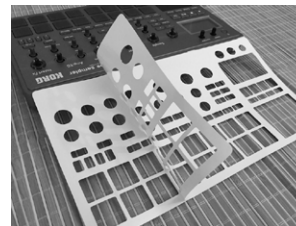

**Attention:** The adhesive strips (for temporary fixation) must **not come loose** during this time! In addition, make sure that the now-adhesive overlay does **not** touch the device in this step!

### 5. Stick on the overlay

Now you start slowly, starting with the lower edge (which was fixed by the fixing strips) and stick the overlay from bottom to top.

So first fix the lower, horizontal edge (near the knobs) completely and then work your way up slowly.



**Attention:** In this step you need to be careful, as it is not advisable to remove and replace the overlay multiple times. Take your time and gradually apply the overlay.

### 6. Re-attach knob caps - and remove fixing strips

Now the knob caps are put back on from above. Then remove the fixing strips.

Congratulations, the overlay is now installed - have fun!